

Driver's Guide  
for the  
**CRATE LIMO**  
*TX50D*  
battery powered amplifier



**Powerful, Portable Tone with Style!**

# CRATE TX50D

## CONGRATULATIONS!

You are now the proud owner of the Crate TX50D battery powered amplifier with Digital Signal Processing. At last, you can take your music with you and have great tone on the road. Not only is the TX50D compact and portable, it also sports two separate channels and the incredible sound that has made Crate a household name among musicians.

Your Crate amplifier is musician-made in the U.S.A. using the finest components available. Each unit is rigorously tested by skilled technicians and musicians to ensure that your amplifier is the best it can be!

In order to get the most out of your new amplifier, we strongly urge you to go over the information contained in this manual before you begin playing.

Thanks for choosing **CRATE**.

## CONTENTS:


Features .....	3
About the Power Supply .....	4,5
The Front Panel .....	6,7
The Rear Panel .....	8
About the Insert Jack .....	8
Suggested Setups .....	9,10
System Block Diagram .....	11
Technical Specifications .....	back cover

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN			<b>ATTENTION</b> RISQUE D'ELECTROCUTION NE PAS OUVRIR			<b>VORSICHT</b> ELEKTRISCHE SCHLAGEGFAHR NICHT OFFENEN	
<small>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</small>			<small>ATTENTION: POUR REDUIRE D'ELECTROCUTION NE PAS ENLEVER LE COUVERCLE. AUCUNE PIECE INTERNE N'EST REPARABLE PAR L'UTILISATEUR. POUR TOUTE REPARATION, S'ADRESSER A UN TECHNICIEN QUALIFIE.</small>			<small>VORSICHT: ZUR MINIMIERUNG ELEKTRISCHER SCHLAGEGFAHR NICHT DEN DECKEL ABNEHMEN. INTERNE TEILE KONNEN NICHT VOM BENUTZER GEWARTET WERDEN. DIE WARTUNG IS QUALIFIZIERTEM WARTUNGSPERSONAL ZU UBERLASSEN.</small>		
<p>THIS EQUIPMENT HAS BEEN DESIGNED AND ENGINEERED TO PROVIDE SAFE AND RELIABLE OPERATION. IN ORDER TO PROLONG THE LIFE OF THE UNIT AND PREVENT ACCIDENTAL DAMAGES OR INJURY, PLEASE FOLLOW THESE PRECAUTIONARY GUIDELINES:</p> <p><b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN CHASSIS; DO NOT DEFEAT OR REMOVE THE GROUND PIN OF THE POWER CORD; CONNECT ONLY TO A PROPERLY GROUNDED AC POWER OUTLET.</p> <p><b>WARNING:</b> TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.</p> <p><b>WARNING:</b> WHEN USING TALL OR STACKED SPEAKER CABINETS, USE THEM <b>ONLY</b> ON A LEVEL SURFACE. <b>NEVER</b> SET TALL OR STACKED CABINETS ON A SURFACE WITH MORE THAN A FIVE DEGREE INCLINE SINCE TIPPING OR FALLING COULD OCCUR, POSSIBLY CAUSING SERIOUS INJURIES.</p> <p><b>CAUTION:</b> NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p> <p><b>CAUTION:</b> THIS UNIT IS CAPABLE OF PRODUCING HIGH SOUND PRESSURE LEVELS. CONTINUED EXPOSURE TO HIGH SOUND PRESSURE LEVELS CAN CAUSE PERMANENT HEARING IMPAIRMENT OR LOSS. USER CAUTION IS ADVISED, AND EAR PROTECTION RECOMMENDED IF UNIT IS OPERATED AT HIGH VOLUME.</p>								
<b>EXPLANATION OF GRAPHICAL SYMBOLS:</b>			 = "DANGEROUS VOLTAGE" "DANGER HAUTE TENSION" "GEFAHLICHE SPANNUNG"			 = "IT IS NECESSARY FOR THE USER TO REFER TO THE INSTRUCTION MANUAL." "REFERREZ-VOUS AU MANUAL D'UTILISATION" "UNBEDINGT IN DER BETRIEBUNGSANLEITUNG NACHSCHLAGEN"		

# CRATE TX50D

## FEATURES:

- Two separate channels
- Crate's Digital Signal Processing (DSP)
- Insert jack for connecting external effects
- CD Inputs for connecting background music
- Footswitch control of channel selection and DSP on/off
- Headphones jack for silent operation
- Internal rechargeable power supply for up to 8 hours of normal playing time, 2 hours at full output - fully recharges within 6 hours (when battery is fully discharged; shorter if partially charged)
- Can also be powered by an AC wall adapter (supplied) or by a 12 volt vehicle car adapter (included - see page 5)
- Two-color battery status LED - red indicates low battery, yellow indicates battery okay
- Tuned port cabinet for extended bass response; 10" woofer and 2" Piezo tweeter for full range sound with clear highs
- Durable black or platinum Tolex® covering
- Complete set of rubber feet on three different sides - for positioning as a low angle monitor, a high angle monitor or as an upright speaker (see below)
- Stand mount adapter (1-1/2" diameter) for PA use (see below)

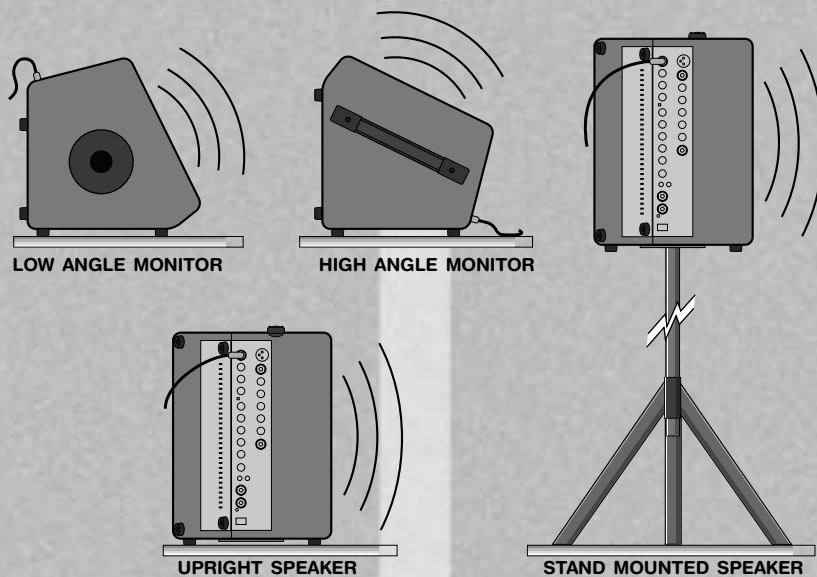

# CRATE TX50D

## ABOUT THE POWER SUPPLY:

The TX50D uses a sealed lead-acid 12-volt battery as its internal power source. Unlike ni-cad batteries, this battery has no “memory” – it can be fully recharged at any time, without damage to the battery.

When fully charged, the LED next to the power switch will glow yellow with the switch at the on (“I”) position. The LED will change to red when the battery is low and needs recharging. When this happens, turn the amp off, connect the 15-volt charger to the charger jack and plug it in. The LED near the charger jack will glow red while the amp is charging and goes out when the amp is fully charged. The battery fully recharges within 6 hours, providing up to 8 hours of use at low levels, about 4 hours of use at moderate levels, and about 2 hours of use at continuous full power (sine wave). The battery is rated for up to 1000 charging cycles. The charger can also function as an AC power supply.

The battery inside the TX50D must be fully charged before operating the amplifier for the first time. Even though the amplifier leaves our factory with a charged battery, time spent in shipping may cause the battery to lose some of its charge.

**WARNING! Never connect the supplied 15VDC charger to the amplifier’s 12VDC Cigarette Lighter Adapter jack!  
Damage to the amplifier may occur!**

**NOTE:** If the battery is drained too low, the Power LED will go out. This indicates an exhausted battery – one which may not take a charge. If this happens, turn the amp off, connect the 15-volt charger to the charger jack and plug it in. If the Charger LED (see #25, page 8) doesn’t illuminate, the battery might be beyond recharging. (The TX50D uses a “smart” charging circuit and will not allow you to charge a defective battery.) If the battery is serviceable, the LED will glow once the battery reaches 10 volts – leave the charger plugged in and let the battery fully recharge. If the LED never illuminates, the battery may need replacing. Contact Crate’s service department:

SLM Electronics  
1901 Congressional Drive  
St. Louis, MO 63146  
1-800-738-PARTS (7563)

# CRATE TX50D

## ABOUT THE POWER SUPPLY (continued):

The TX50D may also be powered by using a 12-volt vehicle cigarette lighter adapter, available at most electronic supply stores. Make certain that the polarity on the adapter matches what is shown below.




Connect the small round end of the adapter to the 12VDC Automobile adapter jack (#26, page 8), then plug the other end of the adapter into the vehicle's cigarette lighter socket. (In some vehicles, the ignition switch must be in the "on" or "accessory" position to have power at the socket.) **NEVER PLUG THE SUPPLIED 15VDC CHARGER INTO THE AMPLIFIER'S 12VDC LIGHTER PLUG!**

When using the DC cigarette lighter adapter, the vehicle's battery will keep the amp charged to its voltage level - if the battery has a 13.5-volt charge, the amp will charge up to 13.5 volts; if the battery is low and only has a 10-volt charge, the amp will discharge down to 10 volts.

**CAUTION!** The TX50D contains a sealed, rechargeable, lead-acid battery. Improper disposal of battery or replacement with any other type may cause leakage, explosion, and/or injury. See page 4 for additional information. Also, refer to product warranty information.

# CRATE TX50D

## THE FRONT PANEL:

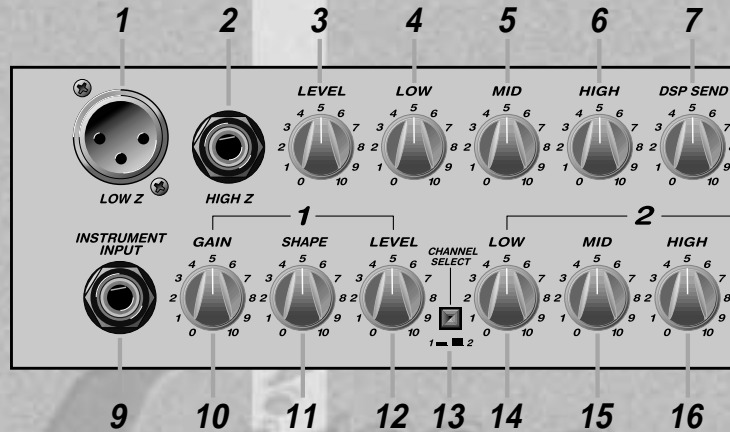

1. **LOW Z:** Connect a low impedance microphone here by means of a shielded signal cable terminated with an XLR type connector.

2. **HIGH Z:** Connect a high impedance microphone here by means of a shielded signal cable terminated with a 1/4" connector.

3. **LEVEL:** Use this control to adjust the level of the mic channel.

4. **LOW:** Use this control to adjust the low frequency level for the mic channel.

5. **MID:** Use this control to adjust the mid frequency level for the mic channel.

6. **HIGH:** Use this control to adjust the high frequency level for the mic channel.

7. **DSP SEND:** Use this control to adjust the amount of signal sent to the internal Digital Signal Processor (DSP) for the mic channel.

8. **INSERT:** Use this jack to connect an external effects device to the amplifier. This is a stereo 1/4" jack, wired as follows:

Tip = Line In (Return - from effect out)

Ring = Line Out (Send - to effect in)

Sleeve = ground

More information on the Insert jack can be found on page 8.

9. **INSTRUMENT INPUT:** Connect an instrument, tape player, CD player, or high impedance microphone here by means of a shielded signal cable terminated with a 1/4" connector.


10: **GAIN** (Active only with the Channel Select switch depressed): Use this control to adjust the gain for the instrument channel 1 - the lower the setting, the lower the amount of distortion. As this control is rotated clockwise, the distortion increases and the output signal becomes louder.

11: **SHAPE** (Active only with the Channel Select switch depressed): Use this control to adjust the tone of the instrument channel 1. Rotating this control counter clockwise enhances mid frequencies; rotating it clockwise enhances the low and high frequencies.

12: **LEVEL** (Active only with the Channel Select switch depressed): Use this control to adjust the output level of the instrument channel 1.

13. **CHANNEL SELECT:** Use this switch to select channel 1 or 2 for the instrument input. With this switch depressed, the Gain, Shape, and Level controls (#10 - 12) are active. With this switch in the out position, the Low, Mid, High, and Level controls (#14 - 17) are active. Channel 1 is typically used for electric guitars since the Gain control can be cranked to produce heavily overdriven distortion.

# CRATE TX50D

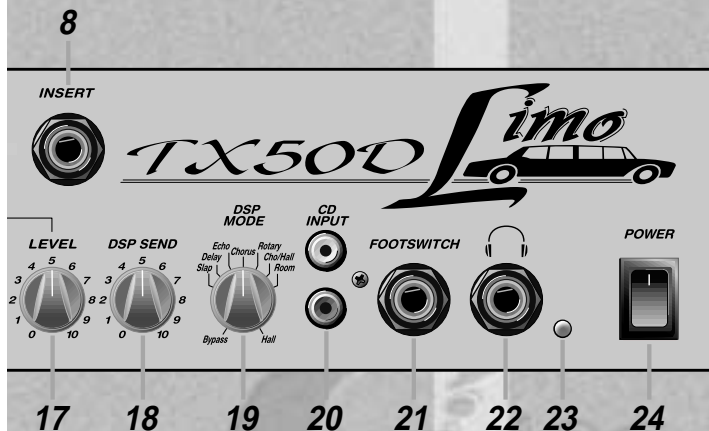

14. **LOW** (Active only with the Channel Select switch out): Use this control to adjust the low frequency level for the instrument channel 2.

15. **MID** (Active only with the Channel Select switch out): Use this control to adjust the mid frequency level for the instrument channel 2.

16. **HIGH** (Active only with the Channel Select switch depressed): Use this control to adjust the high frequency level for the instrument channel 2.

17. **LEVEL** (Active only with the Channel Select switch out): Use this control to adjust the output level of the instrument channel 2.

18. **DSP SEND**: Use this control to adjust the amount of signal sent to the internal Digital Signal Processor (DSP) for the instrument channel.

19. **DSP MODE**: Use this control to select the type of Digital Signal Processing (DSP) effect applied to the signal. The nomenclature around the control is as follows:

- BYPASS**: No effect applied
- SLAP**: Moderate slapback delay
- DELAY**: Moderate delay with regeneration
- ECHO**: Long delay with regeneration
- CHORUS**: Moderate chorus effect
- ROTARY**: Simulated rotating speaker effect
- CHO/HALL**: Chorus combined with large reverb

**ROOM**: Small reverb effect

**HALL**: Large reverb effect

20. **CD INPUT**: Use these jacks to connect the outputs of a CD player or tape player to the amplifier. The output of the CD or tape player may need to be attenuated for a suitable mix with the input channels - see the notes on page 10.

21. **FOOTSWITCH**: Use this jack to connect a footswitch to the amplifier for remote control of the Instrument channel selection and turning the DSP on and off. The jack is wired as follows:

Tip = Instrument channel selection

Ring = DSP control

Sleeve = ground


22. **HEADPHONES**: Use this jack to connect a pair of stereo headphones for private practice sessions. The internal speakers are disconnected when headphones are used.

23. **LED**: This LED illuminates yellow when the power switch is at the on position - when the amp is fully charged. The LED illuminates red when the battery needs recharging.

24. **POWER**: Use this switch to turn the amplifier on (top of the switch depressed) and off (bottom of switch depressed).

# CRATE TX50D

## THE REAR PANEL:

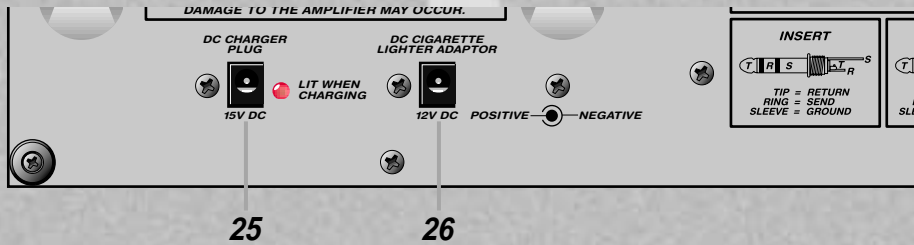


25. DC CHARGER PLUG, 15VDC: Plug the small round connector of the supplied AC wall adapter into this jack to charge the internal battery. The LED next to the jack glows red when the amp is charging. See page 4 for additional information.

26. DC CIGARETTE LIGHTER ADAPTOR, 12 VDC: Plug the small round connector of the optional 12-volt car adapter into this jack to play the amplifier from a vehicle, without using the internal battery. NEVER connect the supplied 15-volt charger to this jack! See page 4 for additional information.

## ABOUT THE INSERT JACK:

The Insert jack (#8) lets you patch external effects into the amplifier just prior to its power amp stage, as shown below. Set the mix controls on the external effects units to "full effect" (100% wet).

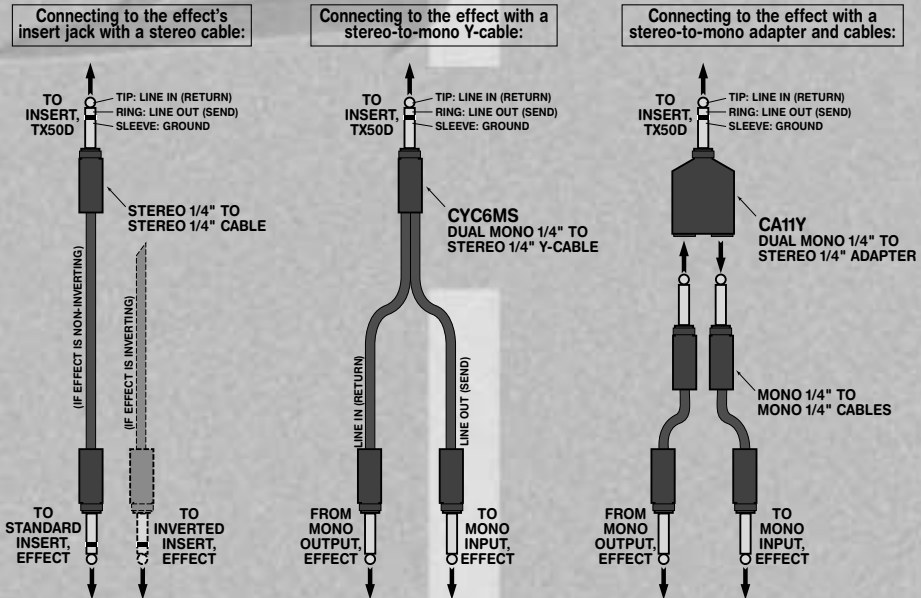


# CRATE TX50D


## SUGGESTED SET-UPS:

The TX50D can be used in a variety of different ways, some of which are shown below and on the following page. Use these ideas to fuel your imagination for the setup which best suits your needs.

**Idea 1 – Play and sing, with external effects and backup:** Connect a microphone to the Low Z jack. Connect an instrument (acoustic or electric guitar, keyboard) to the Instrument Input jack. (This high-Z input works with all types of pickups, from Piezo to active types.) Connect a rhythm machine to the CD Input jacks. A two-button footswitch may be used to select Instrument Channel 1 or 2 and to turn the DSP on and off. Connect the external effects device to the Insert jack using one of the methods shown on page 8. (Note that the external effect will be applied equally to both channels, as well as the CD inputs, so use with discretion.)

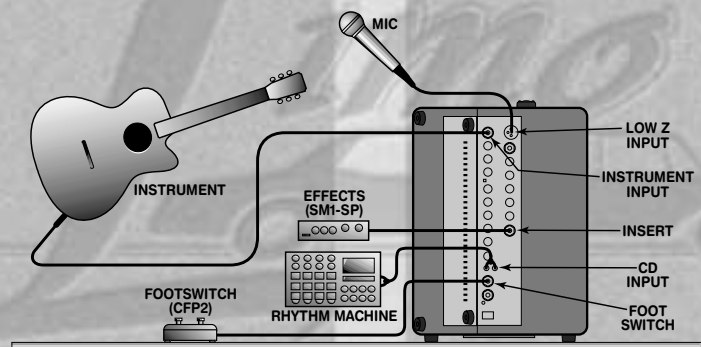


**Idea 2 – Play along:** Connect an instrument (acoustic or electric guitar, keyboard) to the Instrument Input jack. Connect a tape player or CD player to either the CD Input jacks or to the Low Z jack of the remaining channel. (See the notes on page 10 for more detailed information.) A pair of stereo headphones may be connected to the Headphones jack for privacy.

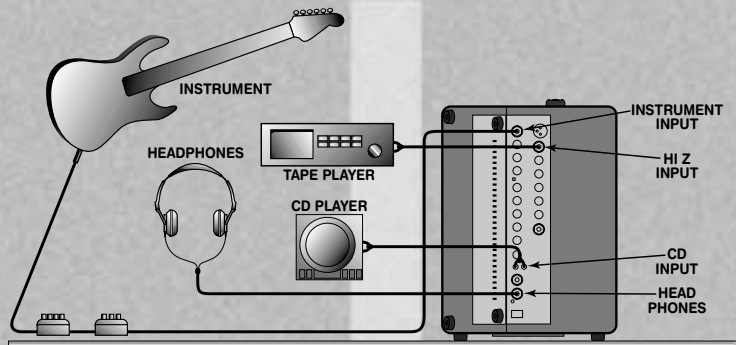

# CRATE TX50D


## SUGGESTED SET-UPS (continued):

**Idea 3 – Sing along:** Connect a low impedance microphone to the Low Z jack. Connect a high impedance microphone to the Instrument Input jack. Connect a tape player (for sound tracks and back up music) to the CD Input jacks. A single button footswitch may be used to turn the DSP on and off.

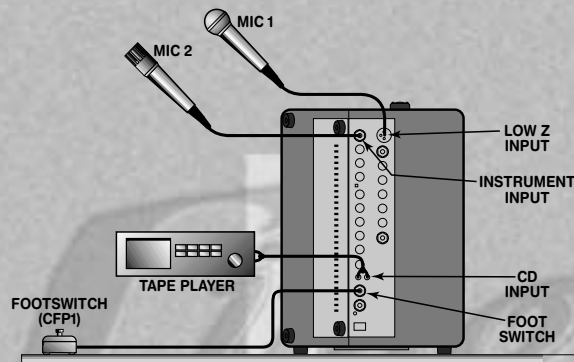



### Notes:

- When a tape player or CD player is connected to the CD Input jacks, the output of the player may need to be adjusted by means of its output level control (if it has one), or by an external attenuator/preamp.
- A tape player or CD player may be connected to either channel instead of to the CD Input jacks. This provides control of the gain and equalization of the signal, as well as the application of DSP if desired. In this case, the left and right outputs of the tape or CD player must be summed to create a mono signal, such as shown below.

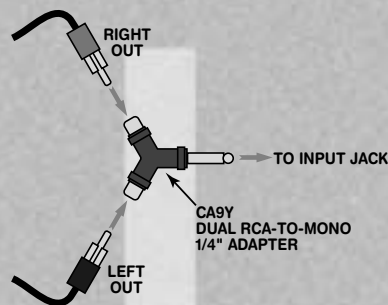

# CRATE TX50D

## SYSTEM BLOCK DIAGRAM:

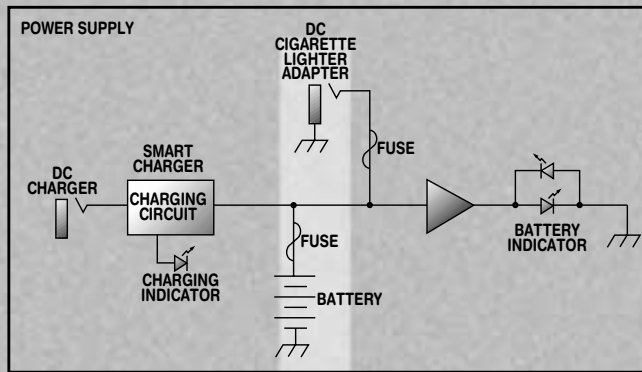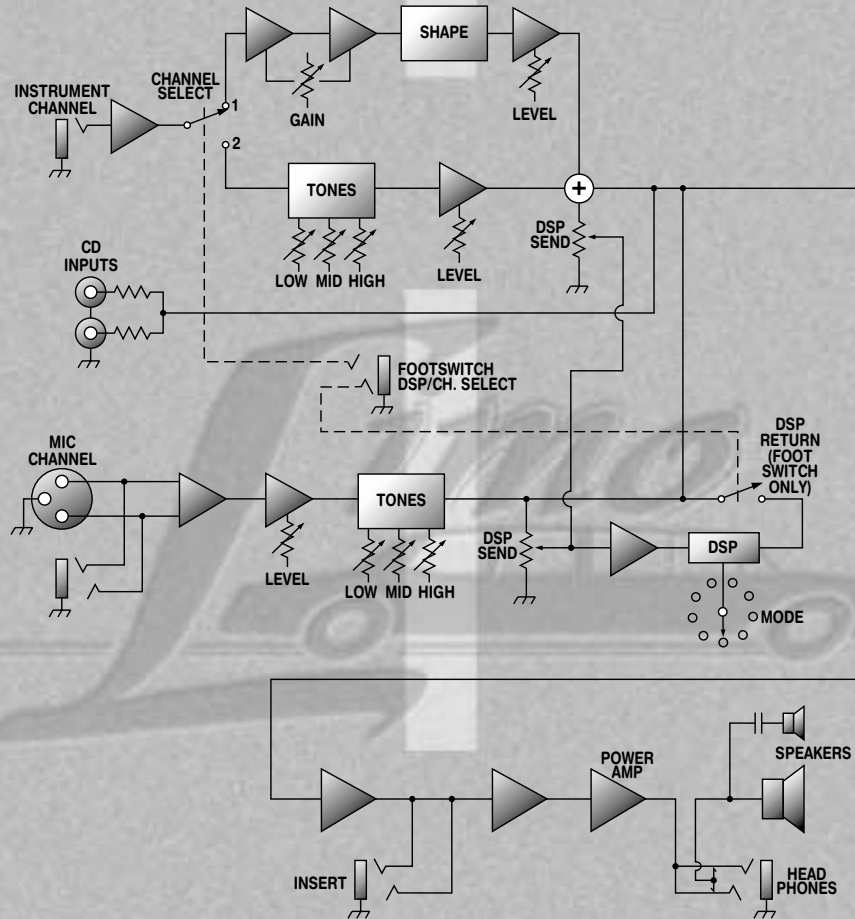

# CRATE TX50D

## TECHNICAL SPECIFICATIONS

**OUTPUT POWER RATING** 50W RMS @ 10% THD, 4 ohms, 13.6VDC in

**INPUT IMPEDANCE** 1M ohm

### MAXIMUM SIGNAL ACCEPTED

Mic Low Z 2V peak to peak  
Mic Hi Z 12V peak to peak  
Instrument 12V peak to peak

**GAIN** Mic 57dB High Z, 72dB Low Z  
Instrument 44dB w/Gain switch out, Ch2  
85dB w/Gain switch in, Ch1

**SENSITIVITY** Mic 3.5mV RMS High Z, 20mV RMS Low Z  
Instrument 80mV RMS w/Gain switch out, Ch2  
.8mV RMS w/Gain switch in, Ch1  
Line In Insert 400mV RMS

**EQS, MIC** Low  $\pm 15$ dB @ 60Hz  
Mid  $\pm 15$ dB @ 600Hz  
High  $\pm 15$ dB @ 10kHz

**EQS, INSTRUMENT** Low 12.5dB range @ 80Hz  
Mid 18dB range @ 800Hz  
High 18dB range @ 10kHz  
Shape Crate proprietary circuit

**INSERT JACK** Tip Line In  
Ring Line Out  
Sleeve Ground

**SPEAKERS** Woofer Crate Custom Design 10", 4 ohm, 100 watt  
1.5" voice coil, 16 oz magnet  
Tweeter 2" Piezo, 4 ohm, 150 watt network

**POWER REQUIREMENTS** Internal 12 volt DC power supply  
DC adapter for use with 120VAC  
Optional 12V vehicle lighter adapter

**SIZE AND WEIGHT** 15-1/2"W x 13"H x 12"D; 32 lbs.

The TX50D is covered with a durable Tolex® material. To keep the cabinet in top condition, wipe it clean with a damp, lint-free cloth to remove dirt and road film. Never spray cleaning agents directly onto the cabinet, and stay away from abrasive cleansers which could damage the finish.

Crate continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice.



[www.crateamps.com](http://www.crateamps.com)



©2000 SLM Electronics • A division of St. Louis Music  
1400 Ferguson Avenue • St. Louis, MO 63133  
P/N 47-099-01 • 03/00